




Compact Touch villuleiðbendingar

7- Cleaning

7.1 Navigation buttons

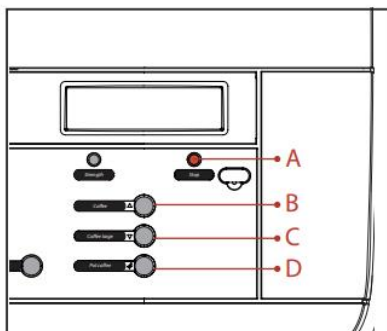

In operator and cleaning mode, 4 UI buttons are used to enter the cleaning mode and navigate the menus.


A Stop = BACK

B Drink button top right = UP

C Drink button middle right = DOWN

D Drink button bottom right = ENTER

7.2 Cleaning procedures

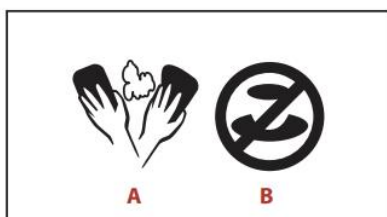

There are two different cleaning programs:

- **"Flushing"** the drink outlets.
 - **"Cleaning"** the cooling compartment and the drink outlets.
- Your Service provider can select the weekdays for **"Flushing"** and **"Cleaning"** programs in the operator menu under **CLEANING DAYS**.



Caution:

It is mandatory to run the **"Flushing"** program at least once a week to guarantee food safety.


When to clean the dispenser

Run the cleaning program when the cleaning icon (A) appears in the display.

If the dispenser is not cleaned and/or flushed within 24 hours, the drink delivery will be blocked and the delivery blocked icon (B) will appear in the display.

The cleaning program must run to completion before the dispenser will resume drink delivery.

7.3 Exterior cleaning

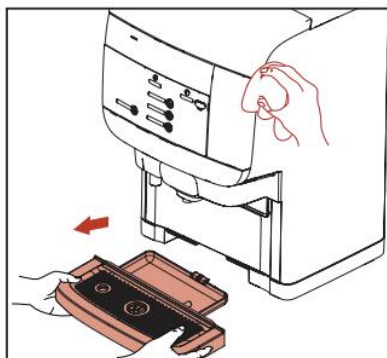

Note:

It is advised to clean the exterior of the dispenser daily. To prevent accidentally dispensing drinks while cleaning the areas around the buttons you can lock the drink dispensing features by opening the door and pressing the "Standby" button. Afterward, press "Standby" again to return to normal dispensing functions.

1. Remove the drip tray and empty it if needed, clean the drip tray with a cloth or brush under warm running water.
2. Clean the exterior of the dispenser with a damp, clean cloth.

7- Cleaning

7.4 Flushing

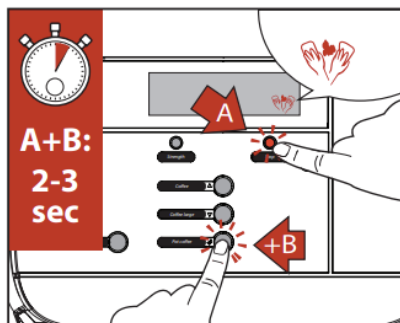


Fig.1

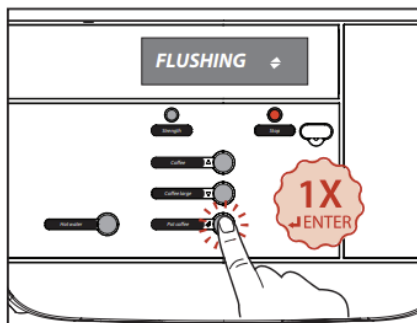


Fig.2

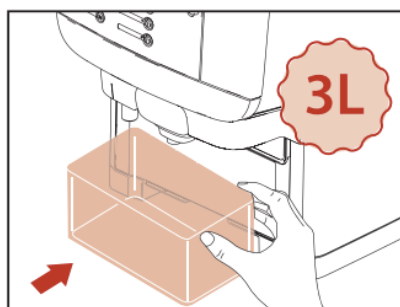


Fig.3

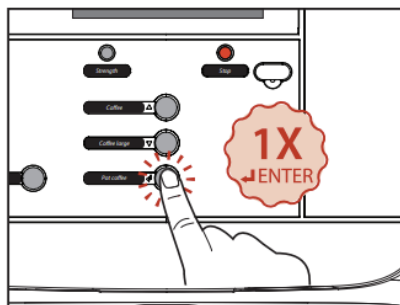


Fig.4

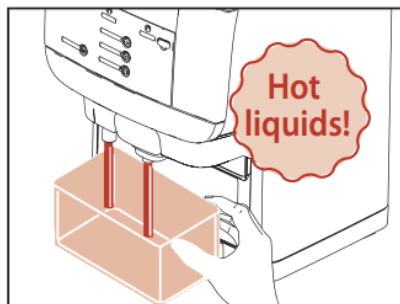


Fig.5



Note:

You can flush the dispenser at any time by using the procedure described below.

1. Press and hold **STOP** (A) and **ENTER** (B) buttons simultaneously for 2-3 seconds to enter the flushing mode (See Fig.1).
2. The display will show **FLUSHING**, press **ENTER** to continue. (See Fig.2) The display will show:
PLACE BIN MIN 1L PRESS ENTER TO CONFIRM
3. Place a 3 liter container (See Fig.3) under the drink outlets, then press **ENTER** (See Fig.4).
4. The dispenser will begin flushing automatically (See Fig.5). **CAUTION HOT LIQUIDS** will shown on the display. When flushing is finished, the dispenser is now ready for normal dispensing again.



Warning:

The flushing water is very hot! Avoid scalding! Keep hands and other body parts away from the dispenser during the flushing process. Never let children perform the flushing procedures.



7- Cleaning

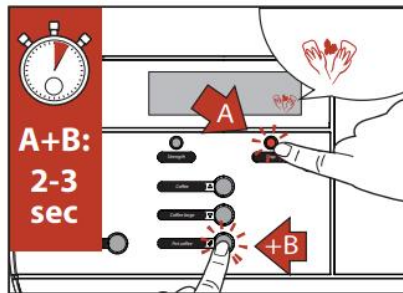


Fig.1

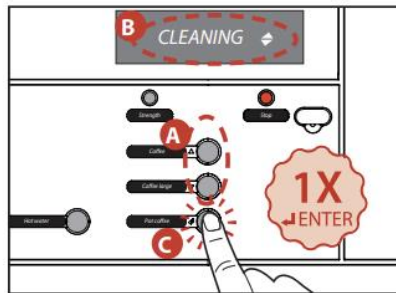


Fig.2

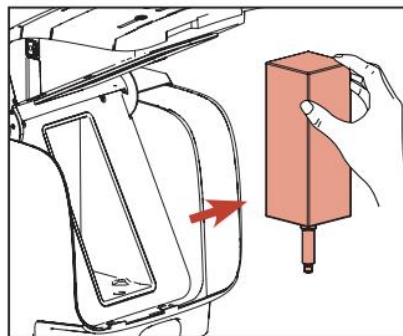


Fig.3

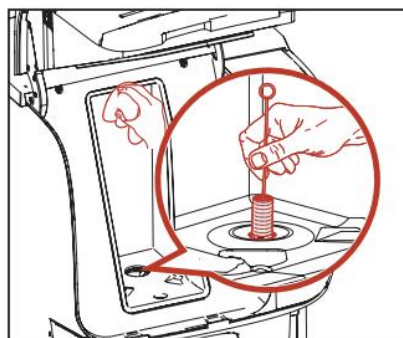


Fig.4

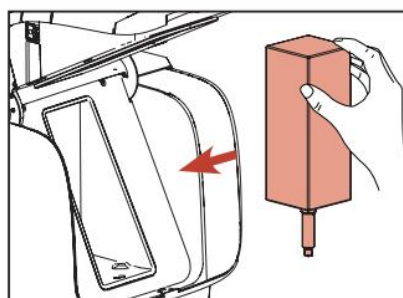


Fig.5

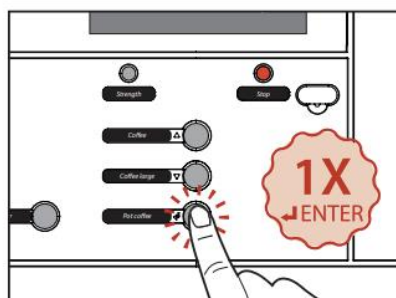


Fig.6

7.5 Cleaning the doser opening and cooler box

1. Press and hold **STOP** (A) and **ENTER** (B) buttons simultaneously for 2-3 seconds to enter the cleaning mode (See Fig.1).
2. The display will show **FLUSHING**, press **UP** or **DOWN** (A) until the display shows **CLEANING** (B), then press **ENTER** (C) to continue (See Fig. 2). The display will show:

REMOVE PRODUCT PACKS CLEAN COOLING BOX

3. Open the dispenser door and remove the product pack (See Fig.3). When the pack has been removed the display will show **CLEAN COOLING BOX PRESS ENTER TO CONFIRM**
4. Clean the doser opening with a brush and the interior of the cooling compartment with a clean, damp cloth and dry with a clean cloth or paper towel (See Fig.4). Then replace the product pack (See Fig.5).
5. Press **ENTER** to continue the cleaning procedure (See Fig.6). The display will show:

REMOVE AND CLEAN MIXING TRAY (Proceed to next page).

7- Cleaning

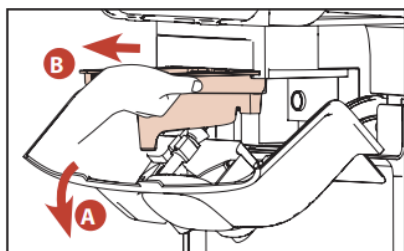


Fig.1

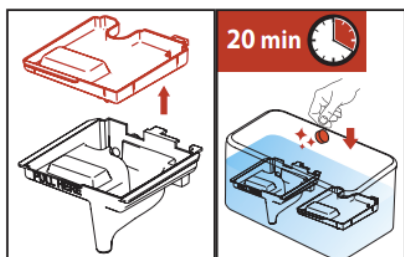


Fig.2

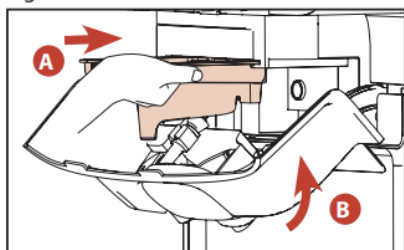


Fig.3

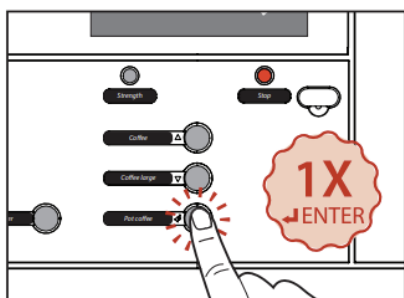


Fig.4

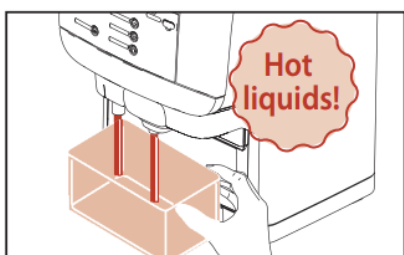


Fig.5

User manual

7.6 Removing and cleaning the mixing tray

1. The display will show: **REMOVE AND CLEAN MIXING TRAY**
2. Follow the steps below:
 - A. Open the water treatment panel. There will be an audible beep.
 - B. Pull the mixing tray straight out. There will be another audible beep. (See Fig.1)
3. Remove the mixing tray cover by simply pulling it straight up. Place the mixing tray parts in a bin with locally approved food-grade cleaning agent and hot water and soak for approximately 20 minutes. Rinse with clean water and dry before replacing. (See Fig.2)
4. The display will show: **REINSTALL MIXING TRAY**, slide the cleaned mixing tray back into its original position (A). and close the water treatment panel (B) (See Fig.3).
5. Press **ENTER** to begin flushing (See Fig. 4). The display will show: **PLACE BIN MIN 1L PRESS ENTER TO CONFIRM**
6. Place a 3 liter container (See Fig.5) under the drink outlets, then press **ENTER** (See Fig.4). When final flushing is finished, the dispenser is now ready for normal dispensing again.

Note:
Comply with the safety instructions and cleaning instructions on the cleaning agent packaging. Optionally, the mixing tray can be washed in a dishwasher.

Warning:
The flushing water is very hot! Avoid scalding! Keep hands and other body parts away from the dispenser during the flushing process. Never let children perform the cleaning procedures.



7- Cleaning

7.7 Replacing product pack and flushing the outlet

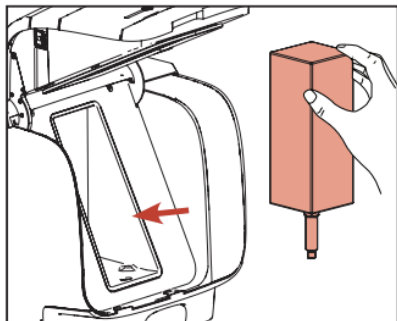


Fig.1

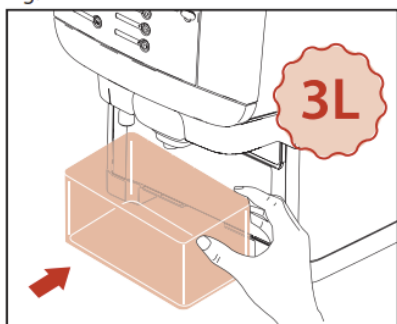


Fig.2

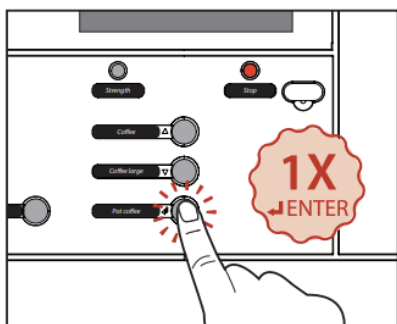


Fig.3

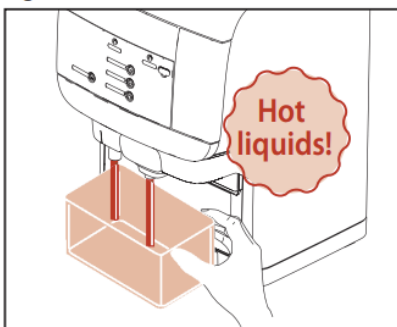


Fig.4

1. When the pack is removed, the display will show:

PLACE BACK PRODUCT PACK

Reinstall the product pack if it has not passed the expiry date.
If expired, replace with a new product pack (See Fig. 1).

2. When the pack has been placed in the cooling compartment, the display will automatically continue and show: **PLACE BIN MIN 1L PRESS ENTER TO CONFIRM**

3. Remove the drip tray and place a 3 liter container (See Fig.2) under the outlets, then press **ENTER**.

4. Press **ENTER** to begin flushing the drink outlets (See Fig 3-4).

CAUTION HOT LIQUIDS is shown in the display.

When done, dispose of the flushed water and replace the drip tray. The dispenser is ready for use.



Warning:

The water being dispensed is hot! Avoid scalding! Keep hands and other body parts away from the dispenser during the flushing process. Never let children perform the cleaning procedures.

7- Cleaning

7.9 Cleaning the water tank

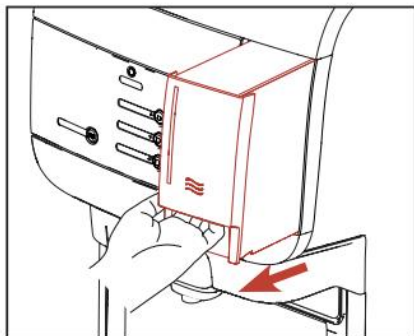


Fig.1

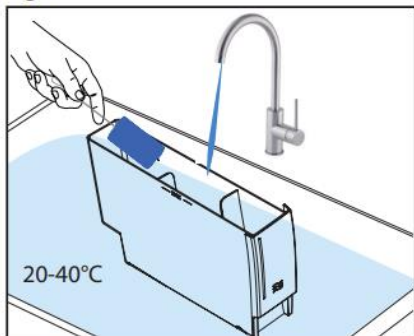


Fig.2

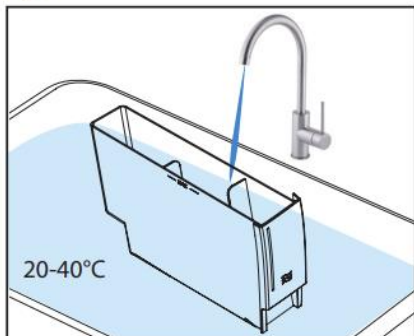


Fig.3

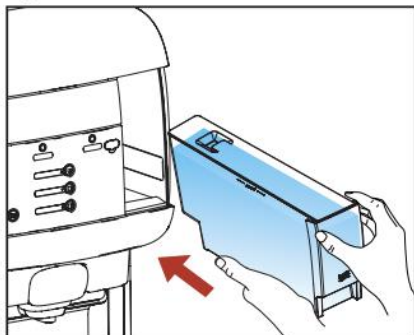


Fig.4

User manual

1. Remove the water tank by lifting slightly, then pulling straight out. (See Fig.1)
2. Wash the water tank with clean water, 20-40°C . A food-safe cleaning agent may be used as needed. (See Fig.2)
3. Rinse the water tank thoroughly with clean water, 20-40°C. (See Fig.3)
4. Refill the water tank to the MAX level with fresh, clean water and replace it in the dispenser. (See Fig.4)



Note:

When replacing the water tank into the dispenser, make sure it is inserted fully into the machine and that the display shows normal functionality.