



Shcaerer Club þrif

Myndband hvernig á að þrifa Soul vél

<https://www.youtube.com/watch?v= 0NY0fnVQmg>



NOTE

A plugged waste water outlet causes the drip tray to overflow.

Check the waste water outlet in the drip tray before starting the cleaning programme.



The cleaning programme can be interrupted at any time. After cleaning is interrupted, the coffee machine is not ready for use. The cleaning programme must be completed. Restart the interrupted cleaning programme as soon as possible.

The cleaning programme is started in the service menu. On the touch screen, the user is guided through all required actions.



- ▶ Remove the drip grid in advance for separate cleaning.
- ▶ Press the [Service menu] field at the bottom left of the user interface.
 - ☑ The "Service menu" opens.
 - ☑ The [Cleaning] field is still inactive if it is PIN-protected.
- ▶ If necessary, select a profile [caretaker, machine operator or service technician] in the [Log-in] field [A].
- ▶ If necessary, enter the configured PIN.
 - ☑ Authorization is granted.
 - ☑ The [Cleaning] field is now active.
- ▶ Press the [Start cleaning] field [B] (see figure below).
 - ☑ The cleaning programme starts with a selection window.

